



*Elements Matt
Fitting Instructions*

Waters

Baths of Ashbourne

Foreword...

Thank you for purchasing a Waters Elements Freestanding bath, It will give you many years of peaceful relaxation, and we hope you don't just have a bath, you Love your bath...



Seb Waters

Prior to installation

Please ensure that your plumbing system is adequate and that you have sufficient space to complete the installation.

Please Note:

We recommend that you employ a suitably qualified plumbing professional to complete the installation of your new bath. We can not accept responsibility for poor or incorrect installation. Please keep these instructions in a safe place for future reference.



Step 1

Unpacking...

Carefully remove the box from the wooden crate ensure you are extra careful when dismantling the wooden crate. Lift the box carefully over the top of the bath.

Carefully unwrap all the shrink wrap and foam protection from around the bath. Remove all packaging from the working area although you may find a cardboard sheet useful as installation template.

1,

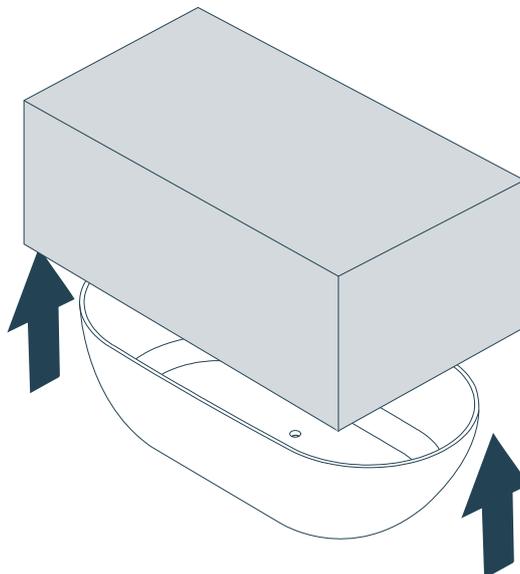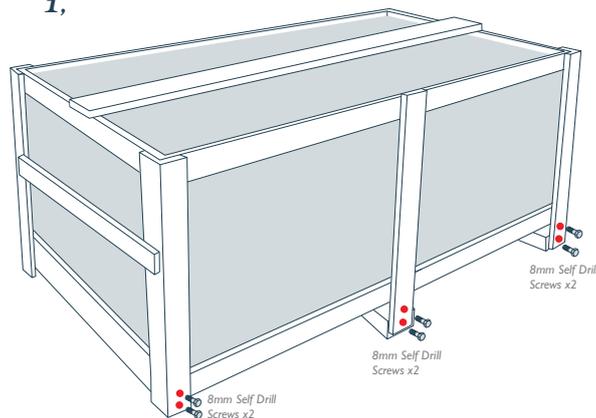


Step 2

Position...

Once unwrapped, carefully check the bath to ensure it is perfect condition before undertaking installation.


For biggest impact we suggest that bath is located a minimum of 150mm away from any wall

2,

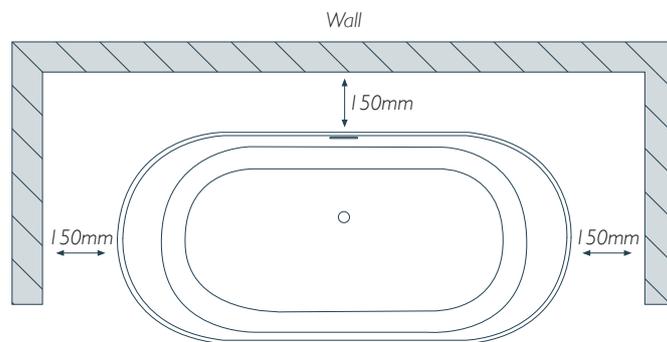

Locate the bath in its intended position and draw around the lower outer edge and mark the waste location with a pencil. Access to the waste and any isolation valves should be considered.

3,

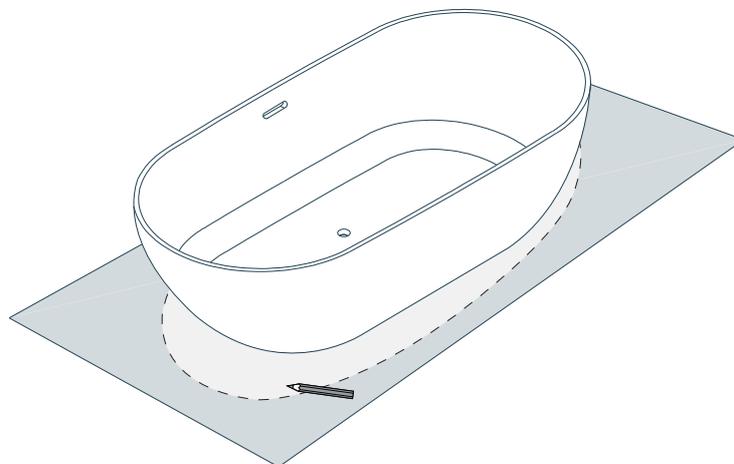



Step 3

Levelling...

With the bath in it's intended position use a large spirit level to check that it is level on both the horizontal and vertical plains. Only if the bath is level will all the water drain to the waste outlet.

Ensure you allow for any variation of the floor surface and that the bath has been levelled in its intended final location.

4,

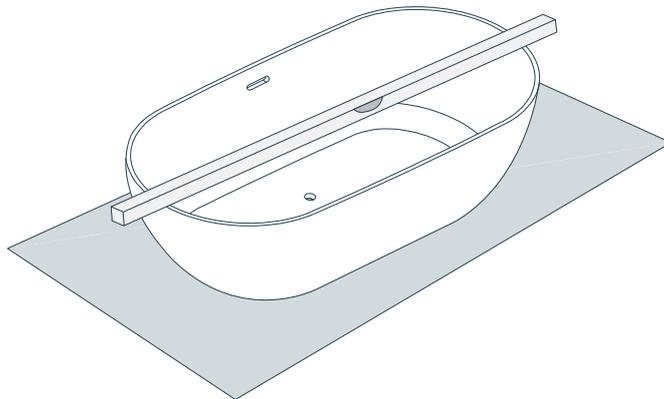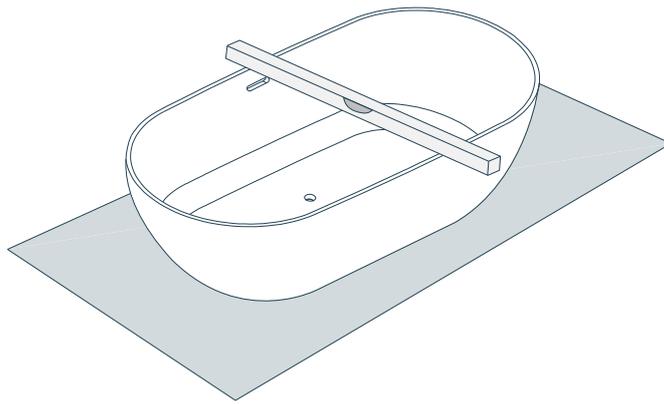



Step 4

Waste...

In most instances the waste will have to be recessed into the floor and connected using a flexible fitting. Once the pipe work is completed and ready to receive the bath we recommend raising the bath on a number of blocks – this will allow working access for you to connect the waste to the underside of the bath. Please be careful the bath is secure as to not hurt yourself or damage the bath.

Once tight add silicone, remove the blocks and lower the bath into position, ensuring that the pipe work is not damaged.

5.

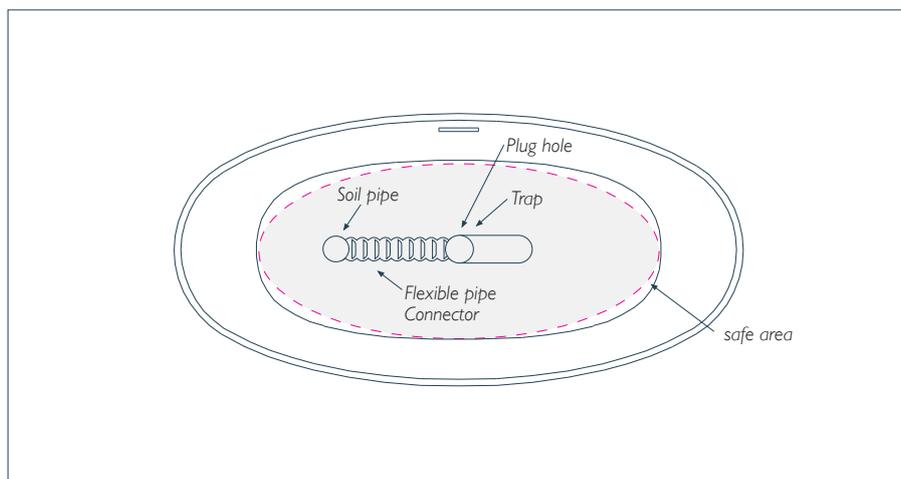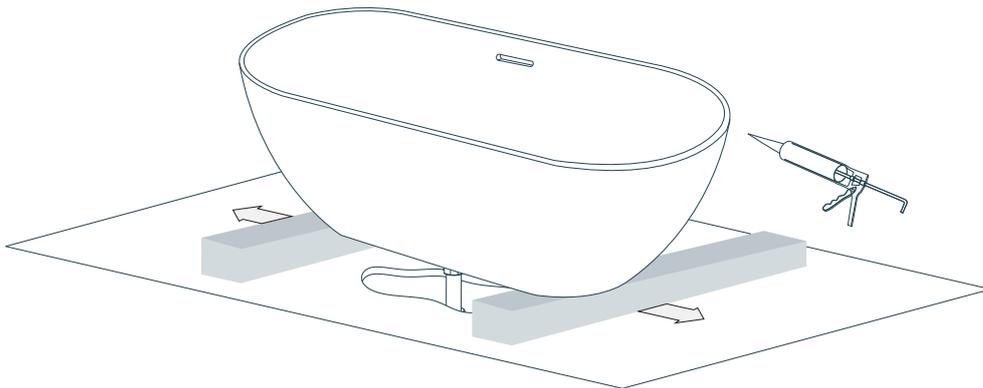

Remember you do not need to fit your bath directly over the soil pipe. It can be positioned anywhere within the shaded area.


Step 5

Fixing...

Before final fixing check that the bath is level and connected to the plumbing system, by adding water and ensuring it drains away adequately leaving no puddles and that there are no leaks.

Once checked, half fill the bath to ballast it before securing it to the floor.

Apply silicone adhesive evenly between the base of the bath and the floor filling the 1-2mm gap.

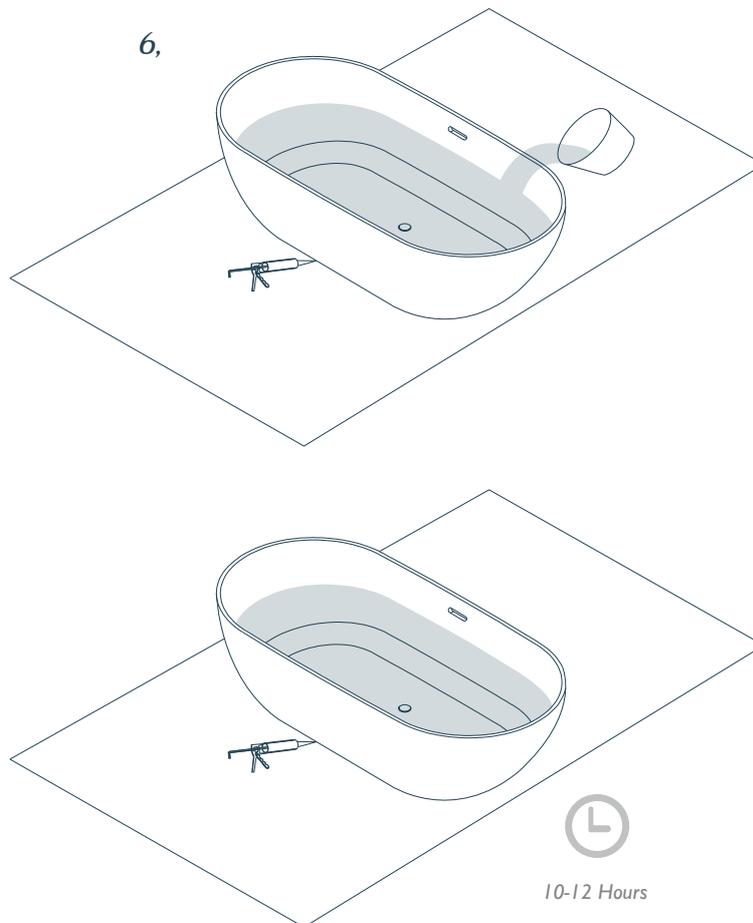

Warranty

& Guarantees

To demonstrate our confidence in the quality and reliability our products, all Waters Baths of Ashbourne Baths are guaranteed to be free of defects in material and workmanship during use by the original purchaser for a period of 20 years and bespoke paint finishes 2 years from date of purchase.

Subject to the terms contained herein, Waters Baths will, at its discretion, repair or replace any defective product, or refund the purchase price. In no event shall the liability under this warranty exceed the original purchase price of the product. Waste kits and accessories are not covered under this guarantee.

Exceptions.

The guarantee does not extend to:

- *Damage caused by cleaning, maintenance, or installation performed other than strictly in accordance with the information contained in the fitting Instructions;*
- *Damage caused by the use of strong chemicals in cleaning;*
- *Damage caused by the use of strong dyes or colourants*
- *Scratching, or staining of the finish over time due to water impurities or atmospheric conditions;*
- *Damage caused by extreme temperature conditions;*
- *Damage due to installation error, product neglect, misuse, or abuse, accident, or negligence, whether caused by the purchaser, a contractor, or a service provider, or any other cause beyond the sellers control.*

Replacement.

Waters Baths of Ashbourne will replace or repair the installed defective products subject to the following conditions:

- *Any claim is made in writing to our office within 10 days of the problem being apparent;*
- *Any claim is by the original purchaser, this guarantee is not transferable;*
- *The product has been used in the manner that it was intended, this protection does not apply to any products that have been misused in any way;*
- *The product must have been installed and cared for in line with our Installation and care instructions.*

(See Installation and care Instructions for proper cleaning, maintenance, and installation information.)

Making a Claim.

To file a claim, contact Waters Baths of Ashbourne through your supplying retailer or by writing to us at Waters Baths of Ashbourne, Long Lane, Dalbury Lees, Ashbourne, Derbyshire, DE6 5BG. Please be sure to provide all relevant information along with supporting images regarding your claim, including a complete description of the problem, the model name, size and any bespoke finish applied to the product, along with the date and place of purchase. Also include your original invoice. In order to assess any claim, we may have to inspect the product as installed before removal and must be provided with access to the product upon request.

Except as provided herein, seller makes no guarantee of any kind, express or implied, with respect to the product, its merchantability, or fitness for a particular purpose. Seller shall not be responsible for any indirect, incidental, or consequential damages resulting from the delivery, installation, or use of the product.

Before installing the bath please read our installation and care instructions. If you have any questions please contact your supplying dealer or us directly on +44 (0) 1332 824166 or via email on info@watersbaths.co.uk

Care Info

Care Instructions...

Thank you For your purchase. Please follow our simple care guide to ensure your new bath will last a lifetime.

Everyday Care...

Rinse with warm water and wipe away any residue with a damp clean lint free cloth.

Periodic Cleaning...

Rinse with warm water add a little of the cleaning product to the abrasive sponge and clean the entire interior area taking care to dilute the cleaning product. Ensure it's fully rinsed away before leaving the bath.

Removing Stains...

Vigorously rub the affected area with the dry abrasive sponge. If not removed add a drop of the cleaning product to the sponge and continue. Never allow the cleaning solution to dry, immediately remove it with water, and ensure any residue is washed away.

Removing Scratches...

Small scratches may be removed by following the stain instructions or by lightly sanding the area with the super fine wet and dry paper supplied in the care kit. Deep scratches and chips can be repaired and your bath entirely resurfaced by factory trained staff, bringing your bath back to "as new" condition. Please contact us for information about these services.

Things to Avoid...

Bathing with bath bombs and coloured oil's may leave residue if they are left to soak for prolonged periods. Avoid bathing with recently applied fake tanning products as they can be difficult to clean and may result in factory refinishing. Aggressive cleaning products and gels should not be used in the bath as surface damage may result. All cleaning products should be well rinsed and not left to dry.

Finally...

Should you have any further questions please don't hesitate to contact us directly on: info@watersbaths.co.uk or 01332 824166.

Tech Info

Bath Specification...

Elements collection...

For absolute bathing luxury look no further than our stone freestanding bath and basin collection – soft comfortable shapes designed to insulate and cocoon you. Made from natural material that has taken millions of years to form. Presented in a sublime matt finish to complement stylish bathrooms in private dwellings and boutique hotels around the world.

Evolve

Elements



Sizes available:

1680 x 800 x 580mm
- LxWxH

Filler options:

FSBF, WF, CF.

Note:

Minimum installation void required for trap and waste is 0mm below floor level.

Weights:

1680mm - Gross 150kg - Net 120kg

Fill information:

| | Ltrs | Gloss | Matt |
|-----|----------|---------|---------|
| 495 | 250 Ltrs | 374 Kgs | 370 Kgs |
| 240 | 125 Ltrs | 249 Kgs | 245 Kgs |
| 0 | 0 Ltrs | 124 Kgs | 120 Kgs |



Countertop basin:

500 x 330 x 125mm
- LxWxH

Splash Plate:

Size:
500 x 320 x 70
- L x W x H



Wall Hung:

Size:
500 x 455 x 125
- L x W x H



Floor Standing:

Size:
400 x 450 x 910
- L x W x H

Ellipse

Elements



Sizes available:

1760 x 820 x 540mm
- LxWxH

Filler options:

FSBF, WF, CF.

Note:

Minimum installation void required for trap and waste is 0mm below floor level.

Weights:

1760mm - Gross 112kg - Net 82kg

Fill information:

| | Ltrs | Gloss | Matt |
|-----|----------|---------|---------|
| 465 | 290 Ltrs | 393 Kgs | 372 Kgs |
| 230 | 145 Ltrs | 248 Kgs | 227 Kgs |
| 0 | 0 Ltrs | 103 Kgs | 82 Kgs |



Countertop basin:

550 x 349 x 125mm
- LxWxH

Cloud

Elements



Sizes available:

1660 x 840 x 500mm
- LxWxH

Filler options:

FSBF, WF, CF.

Note:

Minimum installation void required for trap and waste is 0mm below floor level.

Weights:

1660mm - Gross 115kg - Net 85kg

Fill information:

| | Ltrs | Gloss | Matt |
|-----|----------|---------|---------|
| 480 | 289 Ltrs | 392 Kgs | 374 Kgs |
| 260 | 160 Ltrs | 263 Kgs | 245 Kgs |
| 0 | 0 Ltrs | 103 Kgs | 85 Kgs |



Countertop basin:

550 x 350 x 125mm
- LxWxH

Haze

Elements



Sizes available:

1700 x 750 x 590mm
- LxWxH

Filler options:

FSBF, WF, CF.

Note:

Minimum installation void required for trap and waste is 0mm below floor level.

Weights:

1700mm - Gross 160kg - Net 130kg

Fill information:

| | Ltrs | Matt |
|-----|------|------|
| 450 | 275 | 405 |
| 225 | 135 | 265 |
| 0 | 0 | 130 |



Countertop basin:

550 x 355 x 122mm
- LxWxH

Dawn

Elements



Sizes available:

1700 x 750 x 500mm
- LxWxH

Filler options:

FSBF, WF, CF.

Note:

Minimum installation void required for trap and waste is 0mm below floor level.

Weights:

1700mm - Gross 111kg - Net 81kg

Fill information:

| | Ltrs | Gloss | Matt |
|-----|------|-------|------|
| 465 | 300 | 400 | 381 |
| 230 | 150 | 250 | 231 |
| 0 | 0 | 100 | 81 |



Countertop basin:

550 x 350 x 125mm
- LxWxH

Breeze

Elements



Sizes available:

1720 x 830 x 630mm
- LxWxH

Filler options:

FSBF, WF, CF.

Note:

Minimum installation void required for trap and waste is 0mm below floor level.

Weights:

1720mm - Gross 125kg - Net 90kg

Fill information:

| | Ltrs | Gloss | Matt |
|-----|------|-------|------|
| 495 | 250 | 357 | 340 |
| 240 | 125 | 235 | 215 |
| 0 | 0 | 107 | 90 |



Countertop basin:

500 x 380 x 175mm
- LxWxH

Accessories



Pop-up waste:

- Suitable for Elements

- Available:

- Chrome BTHW-001
- White BTHW-009
- Black BTHW-013



Shallow fast flow trap:

- Suitable for Elements

- BTHF-001

W
a

www.watersbaths.co.uk

Lawns Farm, Long Lane, Dalbury Lees, Ashbourne, Derbyshire, DE6 5BG.
t: 01332 824166 - e: info@watersbaths.co.uk